


- 1. DIG A 4-5 INCH DEEP TRENCH ALONG EDGE OF LAWN.
- 2. PLACE EDGE EX EDGING INTO TRENCH.
  THE BOTTOM "V" LIP OF THE EDGING SHOULD
  BE FACING GROUND COVER OR PLANTING
  AREA.
- 3. POUND STAKE, PIERCING INTO EDGING AT A 45 DEGREE ANGLE. INSTALL STAKE EVERY 5'.
- 4. FOLLOW STEPS 4A 4D TO CONNECT EDGING.
- 5. FILL BACK TRENCH AND TAMP DOWN.

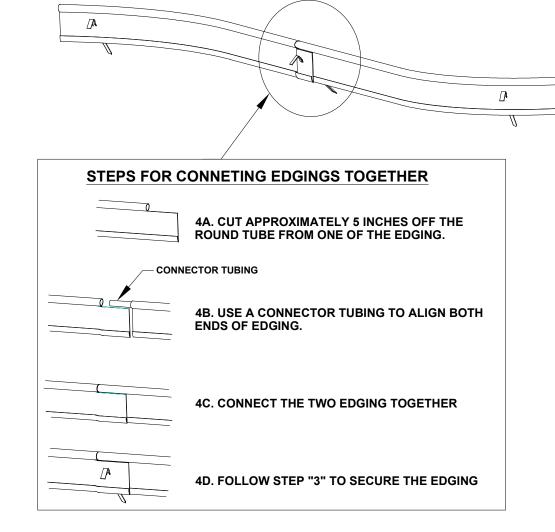

PRODUCT NUMBER	NOMINAL DESCRIPTION	COLOR	ACTUAL DIMENSION D x H x L	RECOMMENDED ACCESSORIES
100060052	20'	BLACK	1.12in X 5.2in X 20ft 2.84cm X 13.2cm x 6.09m	ALL LISTED ON NEXT CHART

INCLUDED ACCESSORIES FOR EACH EDGE EX 20' BLACK TUBE EDGING				
DESCRIPTION AND QUANTITY	ACTUAL DIMENSION D x H x L	PRODUCT NUMBER		
GALVANIZED METAL STAKE / 4	.62in X1.8n X 9in 1.6cm X 4.6cm X 22.9cm	100059577		
CONNECTOR TUBING / 1	.84in Dia. X 6in 2.13cm Dia. X 15.2 cm			

## **EDGE EX BLACK TUBE EDGING DETAIL-415**

MADE IN USA by EPIC PLASTICS 104 E. TURNER RD, LODI CA 95240 www.epicplastics.com