



1. DIG A 4-5 INCH DEEP TRENCH ALONG EDGE OF LAWN.
2. PLACE EDGE EX EDGING INTO TRENCH. THE BOTTOM "V" LIP OF THE EDGING SHOULD BE FACING GROUND COVER OR PLANTING AREA.
3. POUND STAKE, PIERCING INTO EDGING AT A 45 DEGREE ANGLE. INSTALL STAKE EVERY 5'.
4. FOLLOW STEPS 4A - 4D TO CONNECT EDGING.
5. FILL BACK TRENCH AND TAMP DOWN.

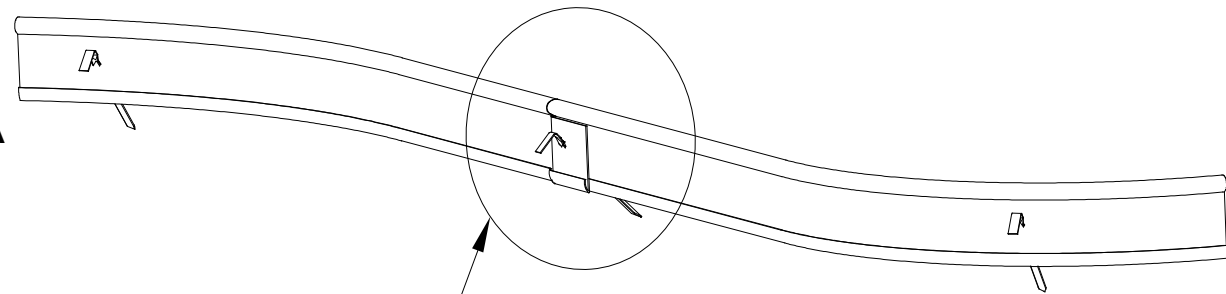

STEPS FOR CONNETING EDGINGS TOGETHER

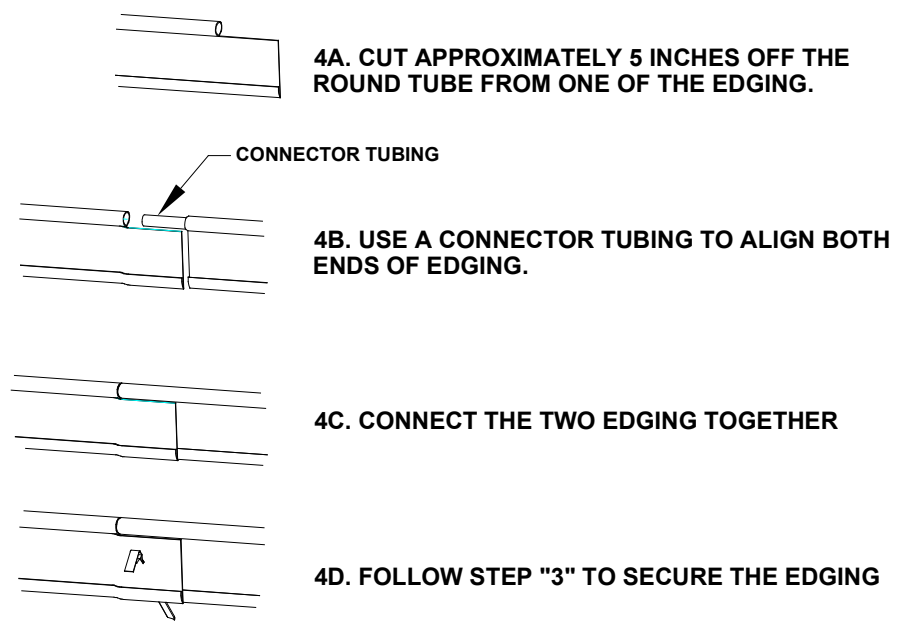

| PRODUCT NUMBER | NOMINAL DESCRIPTION | COLOR | ACTUAL DIMENSION D x H x L |
|----------------|---------------------|-------|--|
| 100060052 | 20' | BLACK | 1.12in X 5.2in X 20ft 2.84cm X 13.2cm x 6.09m |

EDGE EX BLACK TUBE EDGING DETAIL-415 A

MADE IN USA by EPIC PLASTICS
 104 E. TURNER RD, LODI CA 95240
 www.epicplastics.com

209.333.6161

EDGE EX EDGING IS INTENDED FOR NON-STRUCTURAL USE ONLY